

American Red Cross MICROLINK^{FR160}

Self-powered AM/FM, NOAA Weather Radio with
Flashlight, Solar Power and USB Cell Phone Charger



**American
Red Cross**

American Red Cross Radio Line By Etón Corporation

Owner's manual

etón
CORPORATION

NEED HELP? CONTACT US.**Earthtech Products, Inc.****1-877-548-3387****M-F 9am-Midnight, Sat & Sun 9am-9pm EST****WARNING**

- Do not expose this appliance to rain or moisture.
- Do not submerge or expose for extended period to water.
- Protect from high humidity and rain.
- Only operate within specified temperature range (0°C to 40°C).
- Unplug immediately if liquid has been spilled or any object has fallen into the apparatus
- Clean only with a dry cloth. Do not use detergents or chemical solvents as this might damage the finish.
- Unplug and disconnect external antennas during lightning storms.
- Do not remove cover [or back].
- Refer servicing to qualified service personnel.

ENVIRONMENT**Disposal**

According to the European Directive 2002/96/EC all electrical and electronic products must be collected separately by a local collection system. Please act according to your local rules and do not dispose of your old products with your normal household waste.

Please dispose of all types of batteries per your Government, State or Local rules and/or regulations. If you are unsure, please call the appropriate local authority to find out how to dispose of them safely and help protect the environment.



POWER SOURCES

1. Rechargeable battery pack (included).
2. Solar power adapter.

CHARGING THE BATTERY PACK

- Turn the crank for about 90 seconds. This will result in 30-40 minutes of low volume play.
- Place the unit directly in sunlight. The solar power adapter on the top of the unit charges it automatically. About 8-10 hours in the sun will allow about 3-5 hours of play.

CELL PHONE CRANK CHARGING

Because cell phone batteries vary in their current ratings, we cannot specify charging rates or usage time. 10 to 15 minutes of cranking may result in 1 or more minutes of talk-time.

1. Set POWER/VOLUME control to OFF position.
2. Select CELL with the slide switch.
3. Plug the cell phone charging cord into the USB Phone Charge socket.
4. Plug other end of your USB socket into the cell phone's charging socket.
5. Rotate the dynamo crank about 2 turns per second.

NOTE: When charging a cell phone via the USB cell phone charger, it is important to turn the crank at least 2 revolutions per second, or until you see the green or orange LED above the crank handle turn on. This is an indication that the phone is receiving enough power from the radio. Continue to crank at this rate until you are satisfied that an appropriate level of charge has been received by your cell phone. If you decide to stop cranking for whatever reason, please wait at least 5 seconds before beginning to crank again. Not following these instructions may cause damage to your cell phone for which Eton disclaims any liability and will not be held liable for any actual or consequential damages related to this matter.

TURNING THE RADIO ON AND OFF

Turn it on with the ON/OFF/VOLUME control.

To turn it off, set the ON/OFF/VOLUME control to OFF.

ADJUSTING THE VOLUME

Set VOLUME control to the desired level.

TUNING-IN STATIONS

1. Select AM, FM or WB (weather band) channel 1-7 with the band selector switch. For FM and WB, fully extend the telescopic antenna. When using only AM the antenna need not be extended.
2. Adjust the volume with the VOLUME control.
3. Tune stations with the TUNE knob, or tune in WB with the 7-position switch.



USING THE LIGHT

Turn on the light on and off with the light switch on the top of the unit.

EARPHONE JACK

Plug in earphones (not included). Sound is heard from both sides in monaural.